Care of the audio system

Do not use petrol, solvents or abrasive cleaners on the radio. Wipe the surface of the radio with a lint-free cloth to remove dust. Slightly moisten the cloth with clean water to remove any finger marks from the outside surface of the radio.

Cassettes

Always use good quality cassettes. Low cost tapes can cause jamming, the sound quality will be inferior, and they can create a fast build-up of deposits on the play-back head.

Before playing, check the cassettes to ensure that the tape is not loose on the spools. If necessary, take up the slack by gently turning the spools with the end of a pencil. A jammed or sticking tape will cause the auto-reverse mechanism to operate continuously.

It is advisable not to use a tape longer that 45 minutes playing time each side (C90). Cassettes should be stored in their library cases away from direct sunlight. Do not store cassettes in door pockets where they could be affected by the magnets in loud-speakers which might impair the sound quality.

Never insert a cassette that has a torn or loose label, it may cause the mechanism to jam.

After approximately 15 hours playing time, the display on the radio will show CLEAN TAPE. clean the tape mechanism itself using a mechanical type cleaner with a wetting agent in an approved kit available from your Jaguar Dealer. Do not use abrasive type cleaners as they can cause excessive wear on the play-back head.

Compact Discs (CDs)

When handling CDs, do not touch the playing surface. When they are not being used they should always be stored in their cases away from direct sunlight, heat and dust. Scratches, finger-marks or dust on the surface of a disc can cause the optical pick-up to skip tracks. If the surface is dirty, use an appropriate CD cleaner.

Do not attempt to play damaged, warped, cracked or oversized discs. They could seriously damage the play-back mechanism.


Aerial

The aerial care procedure should be carried out when cleaning the exterior of the vehicle, to ensure smooth and reliable operation of the aerial.

When cleaning the aerial, always wipe it in an upwards direction. Occasionally use an aerial maintenance wipe cloth to lubricate the aerial.

In freezing conditions check that no ice has formed over the top of the aerial, this could prevent it from being raised, causing damage to the lift motor.

A special aerial cleaner is available from your Jaguar Dealer.

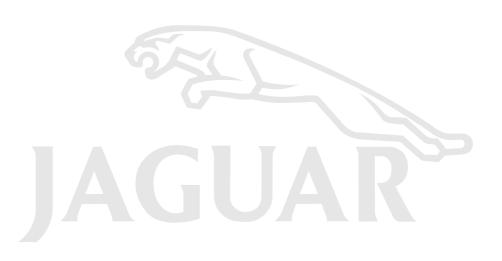

Index

A suital are sustines	05 "
Aerial operation1-4	CD operation2-9
	- Band switches AM and FM2-9
Care of the audio system3-1	– CD button2-9
- Aerial3-1	- CD selection2-9
- Cassettes	- Forward, reverse control2-10
- Compact discs (CDs)3-1	- MIX and disc MIX2-9
Cassette tape operation2-6	- Phone mode2-10
– Band switches AM/FM2-6	- Tape button2-10
CD Button	CD player fault diagnosis2-11
– Dolby B	Compact disc (CD) player
Eject button and tape-in indicator	- CD check sequence
	•
Phone mode2-7	FM and AM reception
- Programme change button2-7	•
- Tape button2-6	Radio broadcast data system2-2
CD changer	- Programme type - PT2-3
- Ejecting the magazine2-8	- RBDS operation
- Inserting the magazine2-8	- RBDS trouble-shooting guide
	Radio cassette
	Radio operation2-1
	- A-MEM with RBDS selected2-1
	– Auto memory (A–MEM)
	– Band switch AM/FM2-1
	- Phone mode2-3
	Radio set up modes2-5
	- To enter the set up mode2-5

Index

Sound quality
- Mode button 1-5
- Optimising sound
Sound system display1-3
Steering wheel audio system controls $\dots 1-3$
Tuning control - Preset buttons
Volume control – ON/OFF

JJM 18 03 14/30