

## Voice command list

All the commands recognised by the system are shown in the list below. Optional words that can be omitted are shown in square brackets. Phrases shown in round brackets are optional ways of giving the command; one of the options separated by the forward slashes, must be given. Data items that you need to input, such as phone numbers, are shown in *italics*. For an explanation of each command, see **Voice command descriptions** on page 16.

### General commands

- HELP
- VOICE HELP
- VOICE MEMORY HELP
- VOICE FEEDBACK (ON/OFF)
- PHONE CONFIRMATION (ON/OFF)
- VOICE [PLAY] DIRECTORY
- VOICE DELETE MEMORY (A/B)
- VOICE DELETE DIRECTORY
- YES – after prompt
- NO – after prompt
- CANCEL – after prompt

### Radio commands

- RADIO PLAY
- RADIO OFF
- RADIO SEEK [UP]
- RADIO SEEK DOWN
- (RADIO TUNE/RADIO/TUNE) *frequency* [MEDIUM WAVE/LONG WAVE/FM]
- RADIO TUNE *nametag*
- [RADIO] [TUNE] PRESET *preset number 1–9*
- [RADIO] [TUNE] [BAND] (MEDIUM WAVE/LONG WAVE/FM)
- RADIO TRAFFIC INFO (ON/OFF)
- RADIO STORE NAME
- [RADIO] STORE PRESET *preset number 1–9*
- RADIO AUTOSTORE
- RADIO [PLAY] DIRECTORY
- RADIO DELETE *nametag*
- RADIO DELETE DIRECTORY
- RADIO HELP
- RADIO MEMORY HELP

## 10 JaguarVoice

---

### Voice command list (continued)

#### Cassette tape player commands

- TAPE PLAY
- [TAPE] REVERSE
- [TAPE] REWIND
- [TAPE] FAST FORWARD
- TAPE SEEK [UP]
- TAPE SEEK DOWN
- [TAPE] DOLBY (ON/OFF)
- TAPE HELP

#### Single CD commands (where fitted)

- CD PLAY
- CD [PLAY] TRACK *track number*
- CD MIX TRACKS
- CD MIX OFF
- CD HELP

#### MiniDisc commands (where fitted)

- MINIDISC PLAY
- MINIDISC [PLAY] TRACK *track number*
- MINIDISC MIX TRACKS
- MINIDISC MIX OFF
- MINIDISC HELP

#### CD changer commands (where fitted)

- CHANGER PLAY
- [CHANGER] [PLAY] DISC *disc number*
- [CHANGER] [PLAY] TRACK *track number*
- [CHANGER] [PLAY] DISC *disc number* TRACK *track number*
- [CHANGER] MIX TRACKS
- [CHANGER] MIX ALL
- [CHANGER] MIX OFF
- CHANGER HELP

#### Generic track commands

Controls the current disc player or last disc player used.

- [PLAY] TRACK *track number*
- MIX TRACKS
- MIX OFF

## Voice command list (continued)

### Phone commands (where fitted)

- PHONE ON
- PHONE OFF
- [PHONE] ENTER *phone digit (2–16 digits)*

Then press and release the voice button, wait until the end of the beep and continue with one of the following:

more digits (1–16 digits)

DIAL

STORE (*nametag* when prompted)

CORRECTION

or CANCEL

- [PHONE] DIAL *phone number (5–16 digits)*
- [PHONE] REDIAL
- [PHONE] DIAL *nametag*
- [PHONE] DIAL MEMORY *memory number*
- PHONE STORE *phone number (2–16 digits)*, (*nametag* when prompted)
- PHONE [PLAY] DIRECTORY
- PHONE DELETE *nametag*
- PHONE DELETE DIRECTORY
- PHONE CONFIRMATION (ON/OFF)
- PHONE HELP
- PHONE MEMORY HELP

### Automatic climate control commands (where fitted)

- CLIMATE CONTROL ON
- CLIMATE CONTROL OFF
- [CLIMATE CONTROL] AUTOMATIC [ON]
- (CLIMATE CONTROL TEMPERATURE/CLIMATE CONTROL/TEMPERATURE) *temperature* [DEGREES]
- (CLIMATE CONTROL TEMPERATURE/CLIMATE CONTROL/TEMPERATURE) (HIGH/LOW)
- [CLIMATE CONTROL] BALANCE [ON]
- [CLIMATE CONTROL] RECIRC [ON] – *disabled in defrost mode.*
- [CLIMATE CONTROL] DEFROST [ON]
- CLIMATE CONTROL HELP

### Manual climate control commands (where fitted)

- [CLIMATE CONTROL] RECIRC [ON] – *disabled in defrost mode.*
- CLIMATE CONTROL HELP

## 12 JaguarVoice

---

### Voice command list (continued)

#### Navigation commands (where fitted)

- [NAVIGATION] SHOW DESTINATION
- [NAVIGATION] SHOW [CURRENT] POSITION
- [NAVIGATION] SHOW [COMPLETE/ENTIRE/WHOLE] ROUTE
- [NAVIGATION] SHOW NORTH UP
- [NAVIGATION] SHOW (HEAD/HEADING) UP – *detailed map scales only*
- [NAVIGATION] ZOOM IN (MAX/MAXIMUM)
- [NAVIGATION] ZOOM OUT (MAX/MAXIMUM)
- [NAVIGATION] [SELECT] ROUTE HOME
- [NAVIGATION] REROUTE
- [NAVIGATION] (VOICE GUIDANCE ON/MUTE OFF)
- [NAVIGATION] (VOICE GUIDANCE OFF/MUTE ON)
- [NAVIGATION] REPEAT [LAST] INSTRUCTION
- [NAVIGATION] [SELECT] ZOOM LEVEL *zoom level 1–13*
- [NAVIGATION] CLEAR ROUTE
- [NAVIGATION] SHOW TURN LIST
- [NAVIGATION] ZOOM IN *zoom increment level 1–12*
- [NAVIGATION] ZOOM OUT *zoom increment level 1–12*
- NAVIGATION STORE NAME
- [NAVIGATION] [SELECT] DESTINATION *nametag*
- [NAVIGATION] ADD WAYPOINT *nametag*
- [NAVIGATION] CLEAR NEXT WAYPOINT
- [NAVIGATION] MINIMISE DISTANCE
- [NAVIGATION] MINIMISE TIME
- [NAVIGATION] PREFER MAJOR ROADS
- [NAVIGATION] AVOID MAJOR ROADS
- [NAVIGATION] PREFER TOLL ROADS
- [NAVIGATION] AVOID TOLL ROADS
- [NAVIGATION] PREFER FERRIES
- [NAVIGATION] AVOID FERRIES
- NAVIGATION [PLAY] DIRECTORY
- NAVIGATION DELETE *nametag*
- NAVIGATION DELETE DIRECTORY
- NAVIGATION HELP
- NAVIGATION ROUTE HELP
- NAVIGATION MEMORY HELP

## Voice command list (continued)

### Navigation traffic information commands (where fitted)

- NAVIGATION TRAFFIC INFO ON
- NAVIGATION TRAFFIC INFO OFF

### Display commands (where fitted)

- DISPLAY ON
- DISPLAY OFF
- [DISPLAY] [SELECT] DAY COLOURS
- [DISPLAY] [SELECT] NIGHT COLOURS
- [DISPLAY] [SELECT] TWILIGHT COLOURS
- [DISPLAY] [SELECT] AUTOMATIC COLOURS
- [DISPLAY] SHOW NAVIGATION
- [DISPLAY] SHOW AUDIO
- [DISPLAY] SHOW CLIMATE CONTROL
- [DISPLAY] SHOW PHONE
- DISPLAY HELP

### Television commands (where fitted)

- TELEVISION ON
- TELEVISION OFF
- TELEVISION [SELECT] CHANNEL *channel number (1–10)*
- TELEVISION SEEK [UP]
- TELEVISION SEEK DOWN
- TELEVISION AUTOSTORE
- TELEVISION CHANNEL UP
- TELEVISION CHANNEL DOWN
- TELEVISION HELP

### Teletext commands (where fitted)

- TELETEXT ON
- TELETEXT OFF
- TELETEXT [SELECT] PAGE *page number (100–999)*
- TELETEXT HOLD [PAGE]
- TELETEXT RELEASE [PAGE]
- TELETEXT HELP