
DAB RADIO CONTROLS

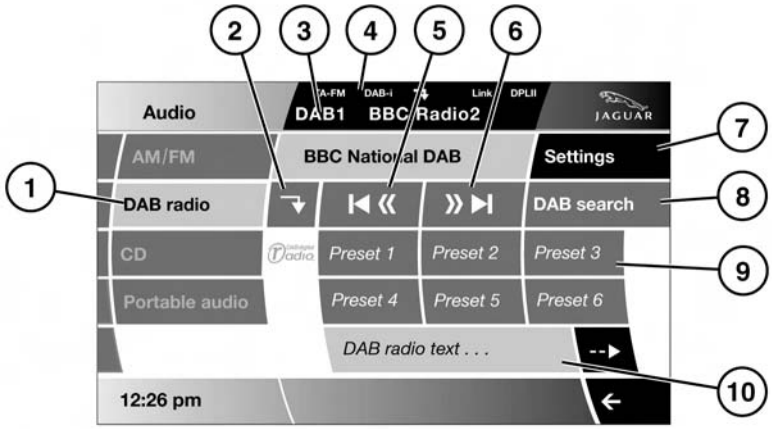

Note: *When DAB is first used, you will be unable to listen to any digital broadcasts until you have completed the* **Auto-tune** *process, see* **DAB search** *(**8**).*

1. **DAB Radio**: Touch to view and select a DAB band (**DAB1**, **DAB2** or **DAB3**). The radio will tune to the last used channel on that band. Touch again to close.
2. **Subchannel**: The subchannel arrow icon will show at the top of the screen and this button will be enabled if a subchannel is available.
   - Touch to access subchannels and then use the seek up (**6**) or seek down (**5**) buttons to find a subchannel.
3. Indicates currently selected DAB band and station title.
4. Indicates options selected (TA-FM, DAB-i or Link).
5. Seek down:
   - Short touch to seek previous available channel.
   - Long touch to seek previous available Ensemble. The first channel in the new Ensemble will be selected.
6. Seek up:
   - Short touch to find the next available channel.
   - Long touch to find the next available Ensemble. The first channel in the new Ensemble will be selected.
7. **Settings**: Touch to view the DAB settings menu:
   - **Sound** and **Bal/Fade**: see **92, AUDIO SETTINGS**.
   - **Options**: Touch to select:

     Announcements: Select up to four types of announcements from a list of eleven, for example, **News**, **Area/Weather**, **Traffic** and **Alarm**.

     When DAB announcement is broadcast, it will interrupt normal play