
PORTABLE MEDIA CONTROLS

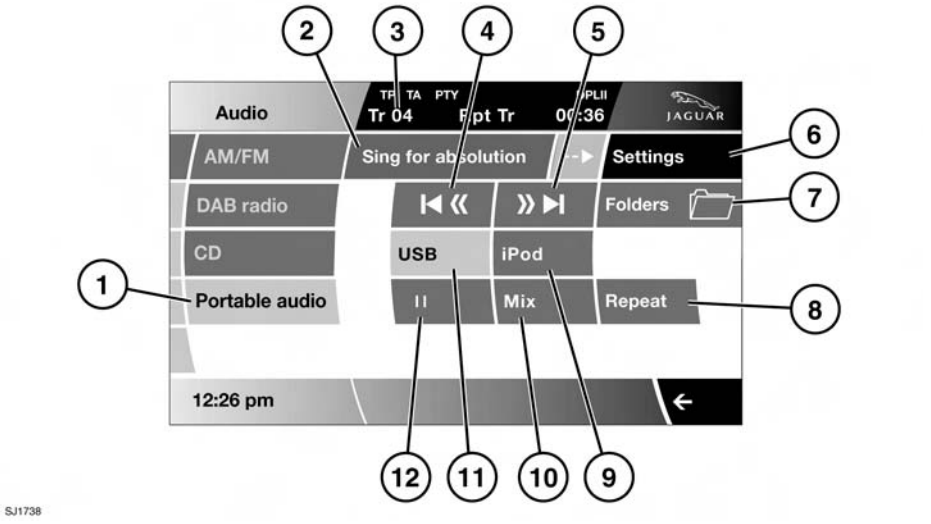

1. **Portable audio**: Select to view the portable audio menu.

   Note: *Sound quality and volume levels available from devices connected to the auxiliary input may vary widely.*

2. Display of information about the current track, including track title, artist, album and genre. Touch the adjacent arrow to toggle through the information which is displayed as a pop-up.

   If there is no information available, the screen will display the text **No entry**.

3. Display shows: Track number (Tr 02), chosen function (Rpt Tr, Mix all etc.) and track elapsed run-time (00.00 or Paused).

4. Skip/Scan backward:
   - Touch and release to skip to the previous track.
   - Touch and hold to scan backwards through the current track. Playback will resume when the soft key is released.

5. Skip/Scan forward:
   - Touch and release to skip to the next track.
   - Touch and hold to scan forwards through the current track. Play will resume when the soft key is released.

6. **Settings**: Touch to view portable media settings.
   - **Sound** and **Bal/Fade**: see **92, AUDIO SETTINGS**.
   - **Options**: Touch to select:

     Traffic: Activate/deactivate traffic announcements (TA).

     Portable audio text: Activate/deactivate playback information.

     Page jump helps you to navigate a very long list of items by setting the number of items scrolled through when a double-arrow page scroll button is selected.