
TELEPHONE SYSTEM OVERVIEW

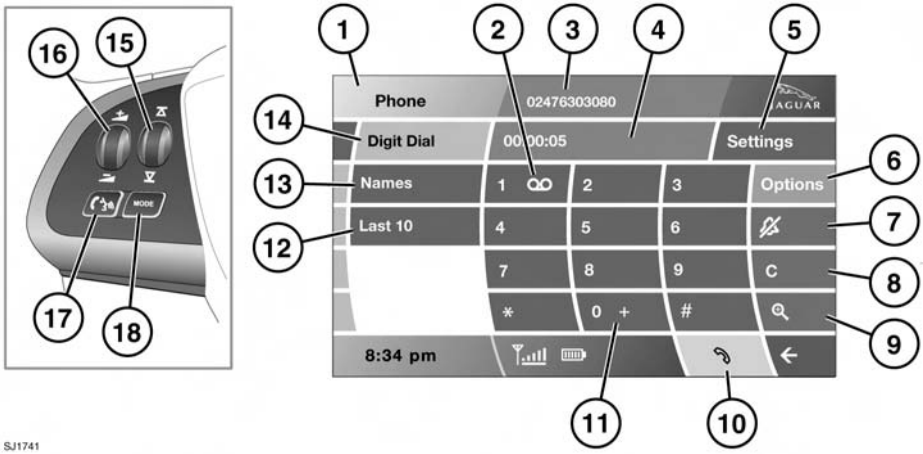

SJ1741

In the interest of safety, only operate, adjust or view the system when it is safe to do so.

Note: *Using the hands-free steering wheel controls is the preferred method of adjustment, as driver distraction is minimised.*

1. Digit Dial screen.
2. Touch and hold to retrieve your Voice mail.
3. Status display: Displays the number dialled etc.
4. Information display.
5. **Settings**, see **109, SETTINGS**.
6. **Options**: Touch to select up to 4 ring tones or to use your own mobile phone ring tone.
7. Mute microphone: Touch to initiate Privacy mode. While selected, the caller will not hear you talking.
8. **C** button: When typing a phone number, a brief touch deletes a single digit or a long touch clears the whole number.
9. Touch to magnify the keypad.
10. Call Connect/Disconnect: Touch to send/accept or end/reject a call.
11. Keypad.
12. **Last 10**: Touch to access the last 10 dialled, received and missed calls.
13. **Names**: Touch to access the downloaded phonebook search screen.
    - Select the first letter of the contact name (continually touch until the correct letter is shown).
    - Touch **OK** to access list of names in the phonebook directory.
    - Select the desired name to make a call.
14. **Digit Dial**: Touch to access Digit Dial mode.
15. Scroll control: Turn to scroll up/down lists of calls or phonebook entries.
16. Volume control: Turn to increase/decrease call volume.
17. Call button: Briefly press to initiate or end a call.
18. **MODE**: Press and hold to access phone mode on the touch-screen and message centre.