TOUCH SCREEN CONTROLS

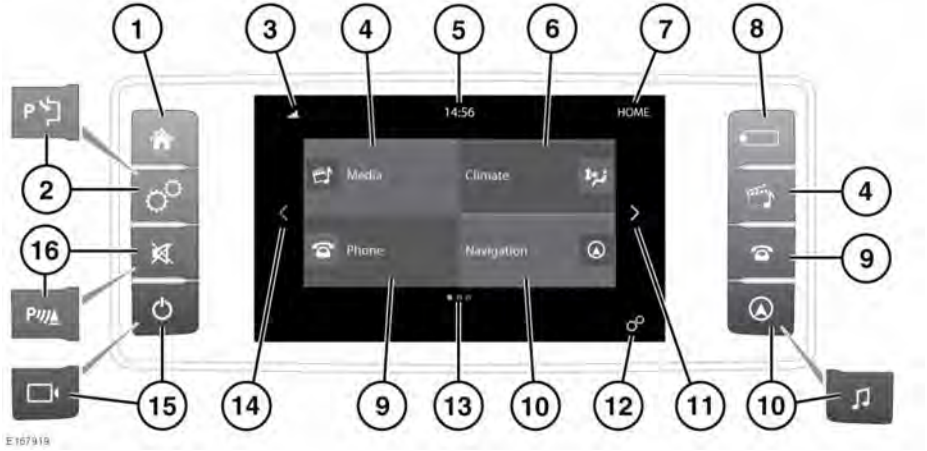

Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving.

Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery; preventing the engine from starting.

Avoid spilling or splashing liquids onto the Touch screen.

Note: *The Touch screen display and the number of screen pages will vary, depending on the specification of the vehicle.*

Note: *The Touch screen will remain active until the ignition is switched off and the driver's door is opened.*

1. Press to select the **HOME** screen.
2. Press to select the **GENERAL SETTINGS** menu, see **76, GENERAL SETTINGS**. If Park assist is fitted, then see **123, PARK ASSIST**.
3. Status icons: When a phone is connected, the battery level and network signal strength is displayed. Also, when selected, **TA** (Traffic announcements) is displayed. See **152, MEDIA SETTINGS**.
4. Touch the screen or press the button, to select the Media system; or if the Media system is already switched on, touch to select the current media source.

   Note: *When the system is active, current information for the media being played will be displayed.*
5. Clock: The clock can be adjusted via the **System** option, in the **GENERAL SETTINGS** menu.
6. Touch to select the **FRONT CLIMATE** system. See **78, CLIMATE CONTROL**.
7. Screen title.
8. Touch to select the media **SOURCE** list.
9. Touch the screen or press the button, to select the **PHONE** screen. See **166, TELEPHONE SYSTEM OVERVIEW**.