EXTERIOR MIRRORS

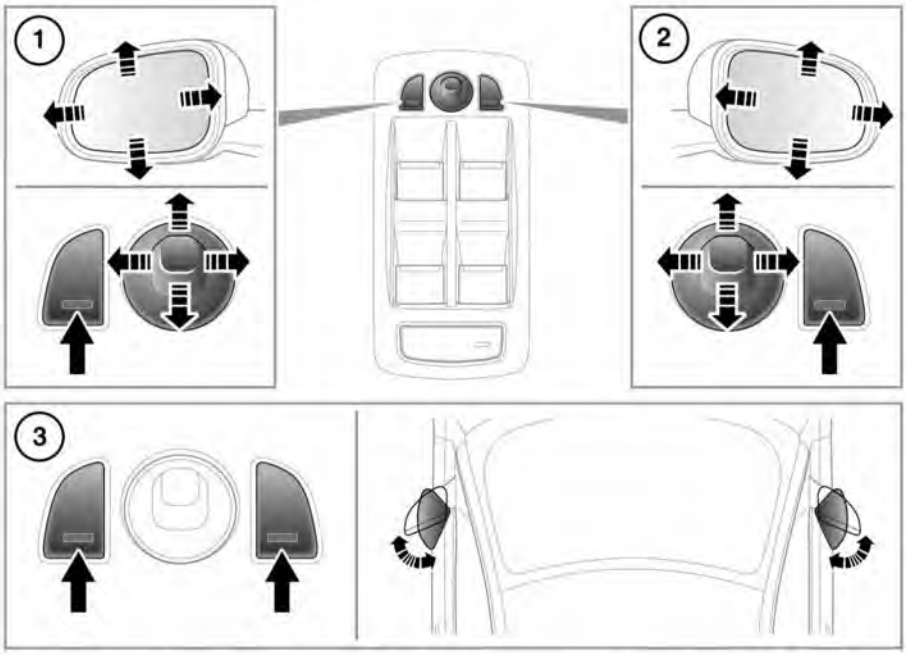

1. Left mirror adjustment.
2. Right mirror adjustment.
3. Power-fold/unfold: Press both buttons simultaneously. This feature is inhibited at speeds over 110 km/h (70 mph).

Note: *A thermal cut-out will temporarily disable the power-fold feature if the switches are operated repeatedly.*

Note: *The rear-view door mirror heaters operate automatically according to the external temperature and the heated rear screen operation.*

Note: *An amount of knock protection is designed into the door mirrors. If a mirror is accidentally knocked inwards or manually folded inwards, the mirror head will be disengaged from the folding mechanism. To re-engage the mechanism, fold then unfold the mirror using the switch.*

The mirrors can be adjusted and folded when the ignition is on and for up to 5 minutes after the ignition is switched off, provided the driver's door is not opened.

Press the appropriate button to select the mirror to be adjusted; the button LED indicator lamp will illuminate to confirm which side is active. Use the joystick control to adjust the mirror's glass.