CLIMATE CONTROL

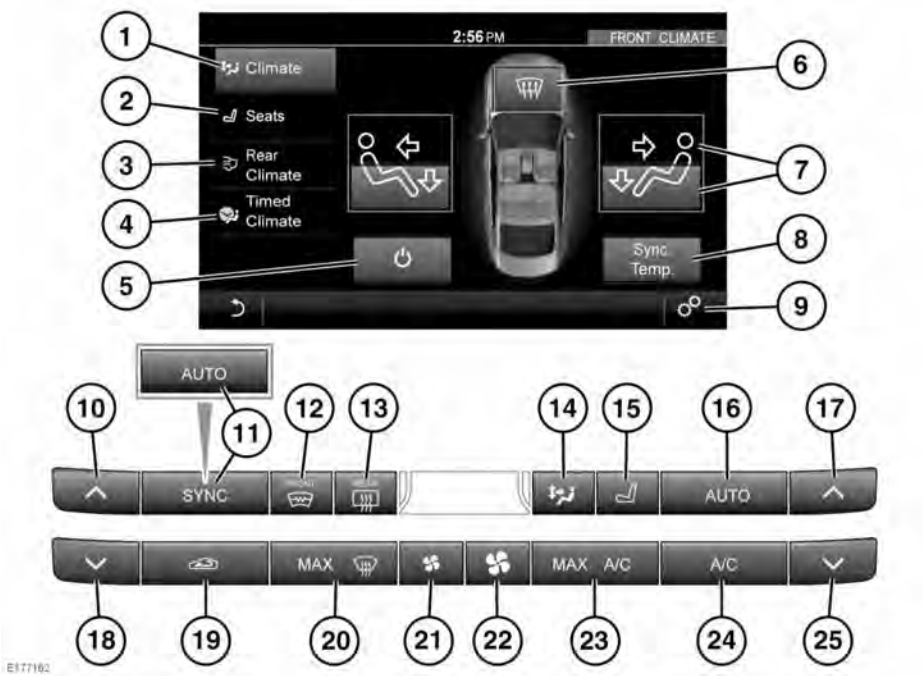

1. **Climate**: To access the **FRONT CLIMATE** screen, touch **Climate** on the **HOME** menu screen. See **75, TOUCH SCREEN CONTROLS**.
2. **Seats**: Touch to select the **SEATS** settings screen.
3. **Rear Climate**: Touch to select the **REAR CLIMATE** settings screen.
4. **Timed Climate**: Touch to select the **TIMED CLIMATE** settings menu. See **81, TIMED CLIMATE**.
5. Touch to switch the Climate control system off.
6. Windscreen air distribution: Touch to switch on/off.
7. Air distribution: Touch the upper (face distribution) or lower (body/feet distribution) area to select.
8. **Sync Temp.**: Select to change all the front and rear passenger climate settings to match that of the driver.
9. Touch to select the **GENERAL SETTINGS** menu, followed by **Climate**, to view the **CLIMATE SETTINGS** screen.
10. Press repeatedly to increase the temperature for the front left side of the vehicle.
11. Press to synchronise the driver and front passenger climate zone settings. On vehicles with Rear climate control, press to select **AUTO** mode (see **16**) for the left side.