AM/FM RADIO CONTROLS

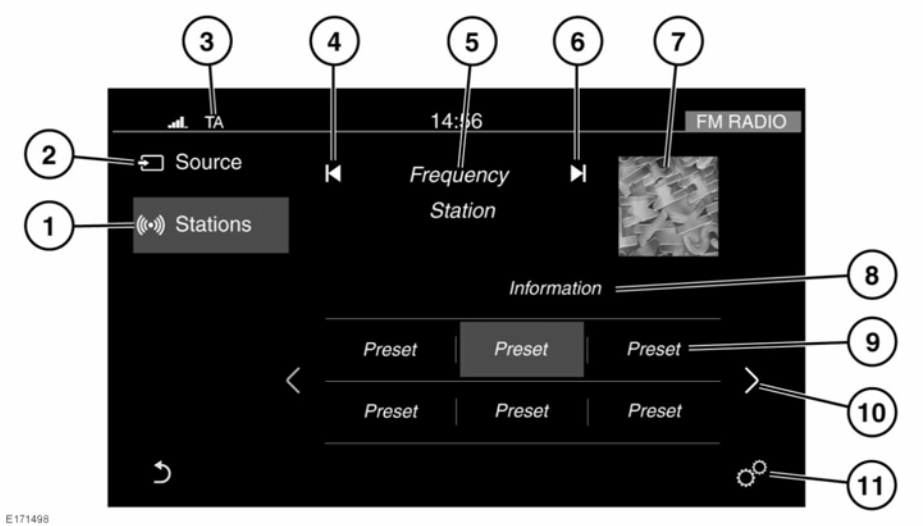

1. **Stations**: Touch to select the station list for the chosen radio source.
2. **Source**: Touch to select the media source list. See **151, MEDIA CONTROLS**.
3. Status icons: When a phone is connected, the battery level and network signal strength is displayed. Also, when selected, **TA** (Traffic announcements) is displayed.
4. Seek down: Touch to auto-seek down the frequency to the next radio station.

   Note: *In some markets, additional buttons are available to enable manual tuning.*
5. The selected station name and frequency.
6. Seek up: Touch to auto-seek up the frequency to the next radio station.

   Note: *In some markets, additional buttons are available to enable manual tuning.*
7. Waveband image (if available).
8. Information from the selected station.
9. Station presets:
   - Touch to tune to the station stored on that preset.
   - Touch and hold to store the current station on that preset.
   - Use the seek buttons on the steering wheel to change to the next or previous preset station.
10. Touch to scroll through the preset stations.
11. Touch to select the **SETTINGS** pop-up menu. Select **Media** and then **Radio**, where the following features can be activated/deactivated:
    - **Manual tune**.
    - **Radiotext** (FM only).
    - **Alternative Frequency** (AF) (FM only).
    - **Regionalization** (FM only).

    Note: *Settings options may vary, depending on the market.*