MAIN MENU

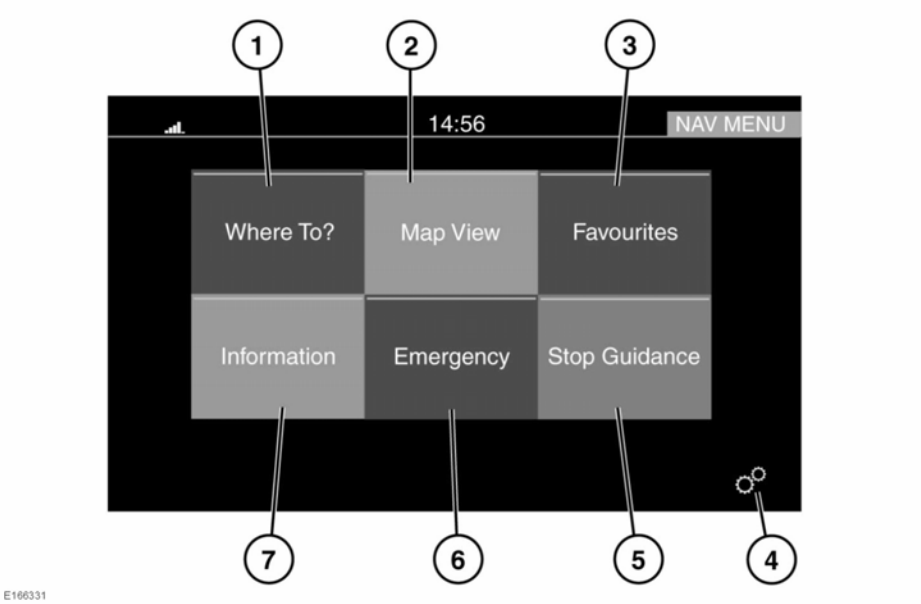

1. **Where To?**: Touch for a list of options for setting a destination. See **180, WHERE TO?**.
2. **Map View**: Touch to view the map screen.
3. **Favourites**: Touch to view the list of stored destinations.
4. **Settings**: Touch to select the **GENERAL SETTINGS** menu, followed by **Navigation**, to view the **NAVIGATION SETTINGS** screen. See **179, SETTINGS**.
5. **Stop Guidance**: Touch to cancel the current route guidance.
6. **Emergency**: Touch to see a list of emergency services. See **181, EMERGENCY**.
7. **Information**: Touch to display the following: **Traffic**, **Where am I**, and **Trip computer**.