
## **Phone Docking Cradle - X-Type**


## FITTING THE DOCKING CRADLE

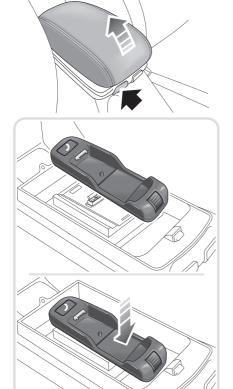

AS0113

- 1. Lift the top of the cubby box.
- 2. Align the connector on the docking cradle with the one on the base plate.
- 3. Push the docking cradle onto the base plate. A 'click' will be heard to indicate that the docking cradle is secured to the base plate.
- 4. Lower the top of the cubby box.

## REMOVING THE DOCKING CRADLE

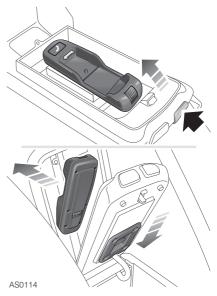

- **1.** Open the upper and lower portions of the cubby box.
- 2. Press the release button to release the cradle.
- **3.** Pull the docking cradle from the base plate to remove.
- **4.** Close the upper and lower portions of the cubby box.