



# Phone Docking Cradle - X-Type

## FITTING THE DOCKING CRADLE

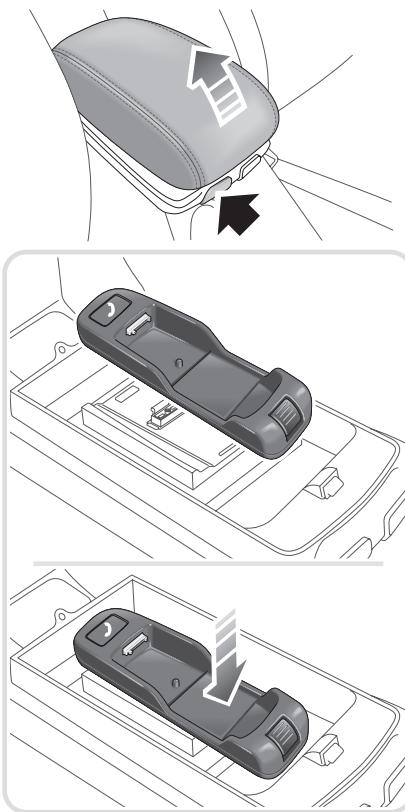

## REMOVING THE DOCKING CRADLE

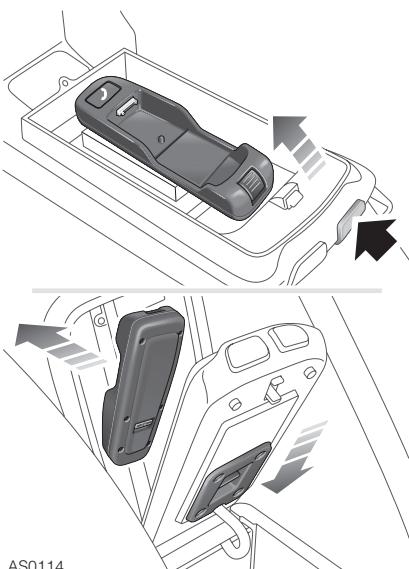

1. Lift the top of the cubby box.
2. Align the connector on the docking cradle with the one on the base plate.
3. Push the docking cradle onto the base plate. A 'click' will be heard to indicate that the docking cradle is secured to the base plate.
4. Lower the top of the cubby box.