Phone Docking Cradle - X-Type


ATTACHING THE PHONE



- 1. Lift the top of the cubby box.
- 2. Insert the base of the phone into the docking cradle.
- **3.** Push the upper part of the phone into the cradle until a 'click' is heard.
- 4. Lower the top of the cubby box.

Note: The mobile phone will be charged while 'Docked' in the cradle. Dependent upon phone make/model, charging can continue for up to 10 minutes after the ignition has been turned off.

REMOVING THE PHONE

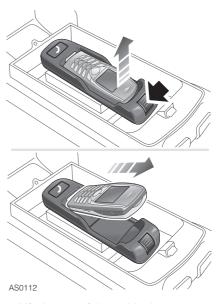

- 1. Lift the top of the cubby box.
- 2. Press the button on the docking cradle to release the upper part of the phone.
- **3.** Slide the phone away from the base and remove from the docking cradle.
- 4. Lower the top of the cubby box.