


PASSENGER COMPARTMENT FUSE BOX

Left side A pillar fuse box

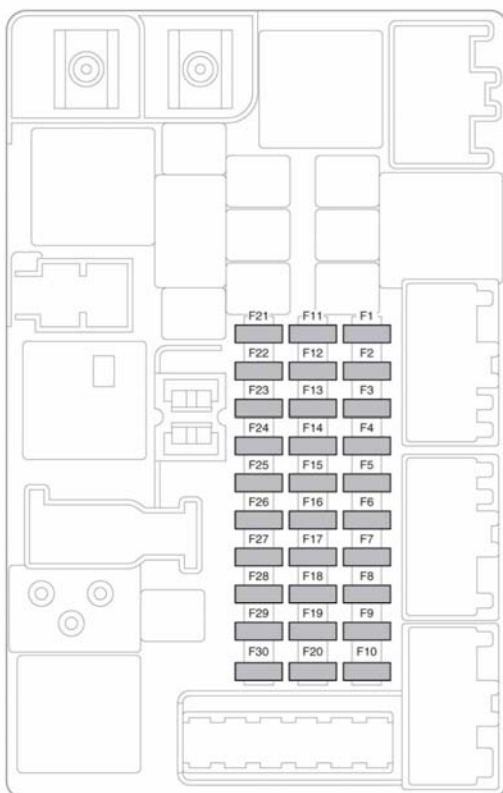


E159451

Fuse No	Rating (amps)	Fuse Color	Circuit
F1	30A	Green	Electric Parking Brake (EPB) (left side)
F2	-	-	-
F3	-	-	-
F4	-	-	-
F5	10A	Red	Instrument panel control, Instrument panel fan

Fuses

Fuse No	Rating (amps)	Fuse Color	Circuit
F6	15A	Blue	Convertible roof (front latch)
F7	-	-	-
F8	5A	Tan	Keyless vehicle module (logic)
F9	15A	Blue	Convertible roof (down lock)
F10	10A	Red	Air conditioning clutch
F11	25A	Clear	Heated front seat
F12	5A	Tan	Seat switch power
F13	10A	Red	Chassis control module (spoiler), JaguarDrive control switch
F14	-	-	-
F15	25A	Clear	Tailgate
F16	30A	Green	Electric Parking Brake (EPB) (right side)
F17	10A	Red	Adaptive damping control, Chassis control module
F18	-	-	-
F19	30A	Green	Fuel pump
F20	-	-	-
F21	10A	Red	Rear camera, Headlamps, Blind Spot Monitoring (BSM), Park Distance Control, Interior mirror
F22	5A	Tan	Right side headlamp motor
F23	5A	Tan	Left side headlamp motor
F24	5A	Tan	Headlamp leveling
F25	10A	Red	Instrument panel control, Instrument panel fan
F26	5A	Tan	Gateway module
F27	-	-	-
F28	-	-	-
F29	10A	Red	Rear camera, Headlamps, Blind Spot Monitoring (BSM), Park Distance Control, Interior mirror
F30	5A	Tan	Normal mode (or Transport mode)

Passenger side foot-well fuse box

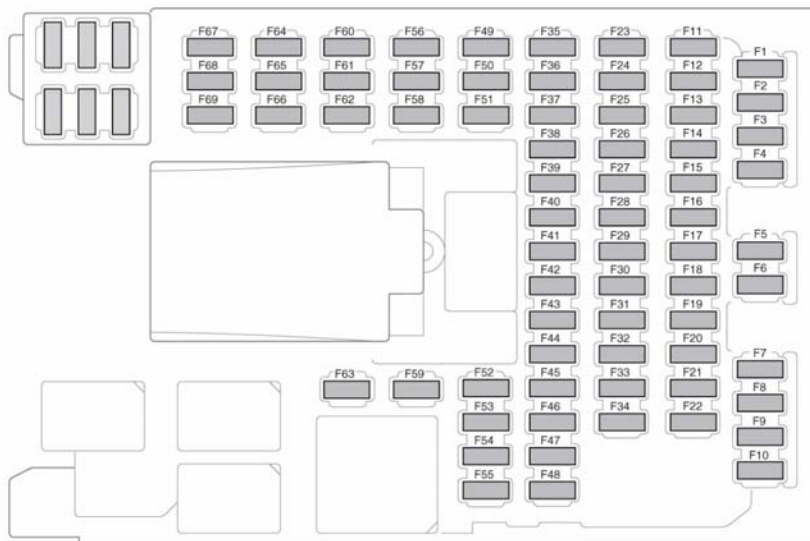

E159424

Fuse No	Rating (amps)	Fuse Color	Circuit
F1	5A	Tan	Radio Frequency (RF) receiver, Interior motion sensor, Tire pressure monitoring sensor
F2	-	-	-
F3	-	-	-
F4	5A	Tan	CAN gateway module
F5	5A	Tan	Anti-lock Braking System (ABS), Steering angle sensor
F6	-	-	-
F7	-	-	-
F8	30A	Green	Right side seat (power 2)
F9	5A	Tan	Electric Parking Brake (EPB)
F10	5A	Tan	Adaptive damping control
F11	-	-	-

Fuses

Fuse No	Rating (amps)	Fuse Color	Circuit
F12	5A	Tan	Reverse lamps and Mirror dimming inhibit
F13	-	-	-
F14	5A	Tan	Brake pedal switch
F15	30A	Green	Heated rear screen
F16	-	-	-
F17	-	-	-
F18	-	-	-
F19	5A	Tan	Powertrain control module, Electronic control module
F20	10A	Red	Heated steering wheel
F21	10A	Red	Passenger air bag disable lamp (overhead console)
F22	5A	Tan	Transmission control module, Rear differential, Electronic transmission switch (ignition signal)
F23	5A	Tan	Fuse box suppression
F24	5A	Tan	Right side rear fog lamp
F25	5A	Tan	Left side rear fog lamp
F26	-	-	-
F27	-	-	-
F28	25A	Clear	Door module (right side)
F29	-	-	-
F30	-	-	-
F31	5A	Tan	Rain sensor, Climate control sensors
F32	25A	Clear	Door module (left side)
F33	-	-	-
F34	10A	Red	Cubby box lock, Stowage box lock
F35	-	-	-
F36	-	-	-
F37	-	-	-
F38	15A	Blue	Front screen washer
F39	-	-	-

Fuse No	Rating (amps)	Fuse Color	Circuit
F40	-	-	-
F41	-	-	-
F42	30A	Green	Left side seat (power 1)
F43	10A	Red	Active exhaust
F44	-	-	-
F45	30A	Green	Right side seat (power 1)
F46	30A	Green	Left side seat (power 2)
F47	-	-	-
F48	-	-	-
F49	-	-	-
F50	-	-	-
F51	5A	Tan	Steering wheel switches
F52	20A	Yellow	Accessory socket (center)
F53	20A	Yellow	Accessory socket/cigar lighter (cubby box)
F54	-	-	-
F55	-	-	-
F56	10A	Red	Restraint control module
F57	10A	Red	Glove box lamp, Reading lamps
F58	-	-	-
F59	10A	Red	Door soft close (close and reverse)
F60	5A	Tan	Occupant control sensor
F61	5A	Tan	Immobiliser antenna unit
F62	-	-	-
F63	-	-	-
F64	-	-	-
F65	-	-	-
F66	-	-	-
F67	-	-	-

Fuses

Fuse No	Rating (amps)	Fuse Color	Circuit
F68	-	-	-
F69	-	-	-