


Exiting the vehicle

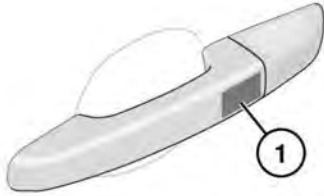

E174803

1. Lock sensor area: To single lock the vehicle, touch only the lock sensor once, without grabbing the door handle. The hazard warning lamps flash once to confirm locking.
To Double lock the vehicle, touch the lock sensor twice within three seconds, without grabbing the door handle. The hazard warning lamps flash twice to confirm (with a long second flash). An audible confirmation (if enabled) may also be given.

Note: Do not place your fingers around the back of the handle while touching the sensor; doing so prevents the vehicle from locking.

Note: When locking the vehicle via Keyless locking, if one or more of the doors, the bonnet or the luggage area is not fully closed, or the ignition is ON, the vehicle will NOT lock. There will be NO audible mislock error warning. The hazard warning lamps will NOT flash and the Power fold mirrors (if fitted and enabled) will NOT fold in. Check that all of the doors, the bonnet and the luggage area are closed properly. Make sure the ignition is switched OFF and lock the vehicle again. If the mislock persists, consult your Retailer/Authorised Repairer.

PASSIVE ARMING

In some markets, a Passive arming feature may be fitted. When it is enabled, it automatically arms the Perimeter alarm system 60 seconds after the driver's door is closed, provided that all of the other doors, the bonnet and the luggage area are also closed. The ignition must also be switched off with no valid Smart keys inside the vehicle.

Passive arming does not lock the vehicle, although access to the luggage area via the interior or exterior release switches is prevented. If a locking fuel filler flap is fitted, it will lock.



Passive arming can be enabled/disabled by a Retailer/Authorised Repairer.

PASSIVE LOCKING

Note: The vehicle will not lock automatically.

Note: The Smart key may not be detected if it is placed within a metal container, or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including when inside a laptop bag), games console, etc. Keep the Smart key clear of such devices when attempting Passive entry, Passive locking or Keyless starting.

Note: Loose coins, in the same pocket as the Smart key, may also affect its detection.

Note: Passive locking activates only if the Smart key is detected outside of the vehicle. If no Smart key is present, no locking will occur.