


USING THE PARKING AID



E161994

1. Parking aid button.
2. Parking aid sensor detection zones.
3. 360° Park Distance Control sensor detection zones.

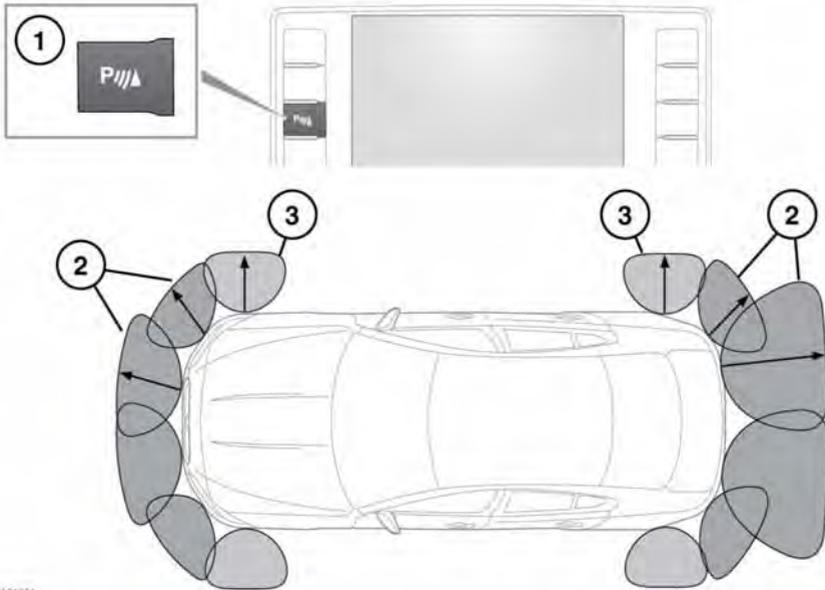

Parking aids and 360° Park Distance Control sensors will not detect moving objects, such as children and animals, until they are dangerously close. Always use extreme caution when manoeuvring.



The Parking aid and 360° Park Distance Control sensors may not detect some obstructions, for example narrow posts or small objects close to the ground.



If accessories, for example, a tow bar, are fitted to the rear of the vehicle, particular care must be taken when reversing. The rear sensors will only indicate the distance from the bumper to the obstacle.

Note: If a trailer is connected to a Jaguar approved trailer socket, the rear sensors will be disabled.

Parking aids

The Parking aid and 360° Park Distance Control systems assist the driver while manoeuvring the vehicle in confined spaces. When active, object tracking along the front, side, and rear of the vehicle will be displayed on the Touch screen. The four corner sensors provide the 360° Park Distance Control monitoring along the vehicle sides. While the vehicle is passing an object that is within sensor range, the vehicle's integrated systems will calculate its trajectory within the 360° Park Distance Control monitored area.

While the vehicle is stationary and an object/person approaches from the side, the sensors will not detect it. Also, at vehicle start-up, the vehicle has no sensor information about side objects/persons. In both of these situations, an X will be displayed on the Touch screen in the vehicle's blind spots

The front, side and outer rear sensors monitor a 1.2 m area around the vehicle. The inner rear sensors monitor a 1.8 m area at the rear of the vehicle.

The Parking aid system is automatically activated when Reverse (R) gear is selected, then the front, rear, and side sensors will be activated. The sensors will remain active until the vehicle's speed reaches 16 km/h (10 mph). If a forward gear is subsequently selected, the front, rear, and side sensors will remain active until the vehicle's speed reaches 16 km/h (10 mph).

By pressing and holding the Parking aid button (1) for 3 seconds, the Parking aid system will enter into an Auto-on mode, which will activate the front and side sensors, when the vehicle's speed decreases to less than 16 km/h (10 mph), in a forward direction. The Parking aid button's LED lamp will flash for a few seconds to confirm. This Auto-on mode will still remain active after the ignition is switched off and on again. To disable the Auto-on mode, press and hold the Parking aid button for 3 seconds. The Parking aid button's LED lamp will flash for a few seconds to confirm.

Note: To manually enable the front and side sensors in a forward direction, press the Parking aid button for less than 3 seconds. The LED lamp will illuminate to confirm. Press the button again to disable the temporary use of this setting. The LED lamp will extinguish to confirm.

Note: The Parking aid system will always be temporarily disabled if the vehicle's speed exceeds 16 km/h (10 mph).

When objects are detected, the Parking aid system will emit a warning tone which increases in frequency as the vehicle gets closer to an object. The tone becomes constant when the obstacle is within 300 mm.

Note: The warning tone will stop when the distance between the vehicle and the object remains constant.

Note: If the Parking aid system does not detect an object likely to come into contact with the vehicle, it will not display any tracking information on the Touch screen.

Note: The sensors should be kept clean to maintain accuracy and performance. See 200, **SENSORS AND CAMERAS**.

PARKING AID SYSTEM FAULT

If a system fault is detected, a long high-pitched tone will sound and the switch indicator will flash. Also a graphic and the message **Parking Aid is not available. Please consult your dealer** will be displayed on the Touch screen. Contact a Retailer/Authorised Repairer as soon as possible.


REAR CAMERA



It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when reversing.



Some overhanging objects or barriers which could cause damage to the vehicle, may not be detected by the camera.

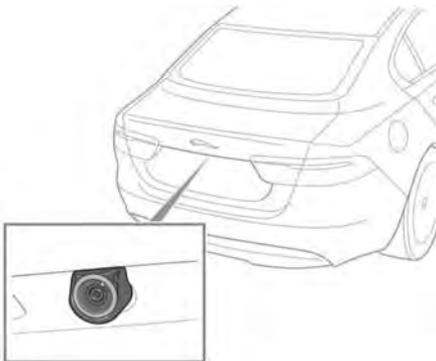

E161382

The Rear camera is located on the luggage compartment lid.


Note: Make sure that this area is kept clean and free from obstructions, for example, stickers, debris, mud, snow, ice, etc.

When Reverse (R) gear is selected, the Touch screen will automatically display a wide-angle, colour image from the rear of your vehicle.

Note: Vehicles with a Surround camera system can also split the screen's rear view image, to also display a 360° view. See **124, SURROUND CAMERA SYSTEM**.

The Rear camera provides a rear-view image to assist in reversing the vehicle. Overlaid on the image are reversing guidelines.

Note: The Rear camera display has priority over the Parking aids display. To cancel the Rear camera display at any time, push the **Home** menu button or touch the back soft key.

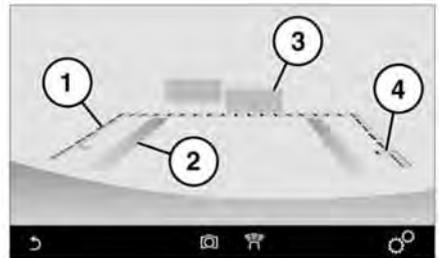

E164947

1. Dotted line: The safe working width of the vehicle (including the exterior mirrors).
2. Solid line: The projected path, based on the current steering wheel position.
3. Parking sensor activation: A coloured area appears, to indicate which rear sensor(s) has been activated.
4. Luggage compartment lid access guidance line: Do not reverse beyond this point if access is required to the luggage compartment.

To adjust the Rear camera settings while in **R**, touch anywhere on the Touch screen to display the user options.

Note: The user options menu/icon selection will differ for vehicles with/without a Surround camera system.

Parking aids

For vehicles fitted with only a Rear camera, touch the icon for the feature required and then the back icon:



Touch to enable/disable the Park assist guidance lines.




Touch to enable/disable the sensor/active graphics.



Touch to enable/disable Hitch assist guidance lines. Use this feature to aid the process of guiding the vehicle to a towing hitch. A single line is displayed as the reversing guidance line. See **89, HITCH GUIDANCE**.

For vehicles fitted with a Surround camera system:

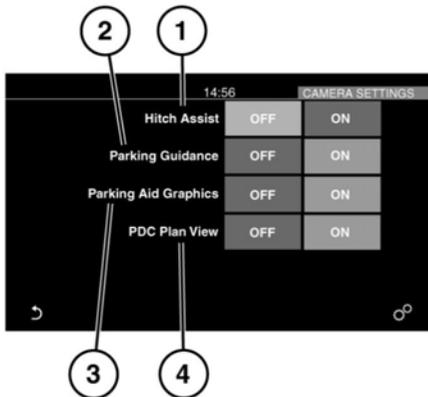



E165234

1. **Hitch Assist:** Select **OFF** or **ON**. See **89, HITCH GUIDANCE**.
2. **Parking Guidance:** Select **OFF** or **ON**.
3. **Parking Aid Graphics:** Select **OFF** or **ON**.
4. **PDC Plan View:** Select **OFF** or **ON**.

The Rear camera display on the Touch screen will discontinue when either of the following apply:

- A forward gear is selected for longer than 5 seconds.
- A forward gear is selected and/or the vehicle's speed is greater than 18 km/h (11 mph).

REVERSE TRAFFIC DETECTION

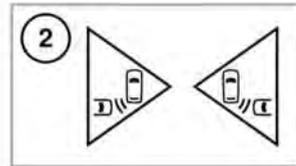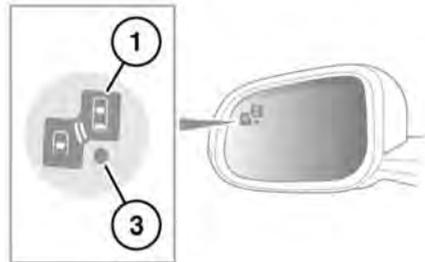

E166916

 **The Reverse Traffic Detection (RTD) system is a supplement to, not a replacement for, safe driving, good observation, and use of the exterior and rear-view mirrors.**

Note: RTD is automatically disabled when a trailer is connected and when Park assist is active.

In addition to the functionality provided by the rear-view camera, the RTD system provides a warning to the driver of any moving vehicle, at either side, that may pose an accident risk during a reversing manoeuvre.

An amber warning icon (1) will flash in the relevant exterior mirror and an audible warning will be emitted to indicate the presence of a moving vehicle. The Rear camera screen or the Parking aid screen will also show a warning icon (2) on the relevant side(s) of the screen. To switch between the Rear camera and the Parking aid screen, touch the camera image or the **Cameras** icon, accordingly.

The system can be enabled or disabled via the Instrument panel menu. See **47, INSTRUMENT PANEL MENU**. When RTD is disabled, an amber dot (3) will be displayed in both exterior mirrors.

REVERSE TRAFFIC DETECTION SENSORS

The Reverse Traffic Detection (RTD) system will automatically disable if any of the sensors become partially or completely obscured. The amber warning indicator dot will illuminate in the exterior mirrors and the message **Reverse Traffic Sensor Blocked** appears in the Message centre.

Check that there is nothing obscuring the rear bumper and it is clear from ice, frost, snow, mud and dirt.

If a fault with a radar sensor is detected, an amber warning indicator dot will illuminate in the exterior mirrors and the message **Reverse Traffic Detection System Not Available** is displayed in the Message centre.

Note: *Even if the detected fault only affects the radar sensor on one side of the vehicle, the whole system is disabled. If the fault is temporary, the system will operate correctly once the engine has been switched off and then on again.*

If a fault occurs, consult a Retailer/Authorised Repairer.